

# Welcome

To The World of Evolis Card Printer Products!

**Congratulations on making the Dualys printer your choice!**

Please read carefully this Operating Guide before installing your printer. It is a quick guide to help you to use your Dualys Card Printer.

**July 2003 © Evolis Card Printer. All rights reserved.**

No part of this document may be reproduced by any method, either mechanical, electronic, photographic, or otherwise without prior written permission from Evolis Card Printer.


All information contained in this document is subject to changes without prior notification.

Rev.1.0

# Summary table

■ <b>Printer description</b> .....	3
■ <b>Printer connection</b> .....	4
■ <b>Driver installation</b> .....	5
■ <b>Indicators</b> .....	6
■ <b>Cards loading</b> .....	9
Card feeder .....	9
Card thickness adjustment .....	9
Card output hopper .....	10
Reject card box .....	10
■ <b>Ribbon loading</b> .....	12
■ <b>Cleaning</b> .....	13
Cleaning of the printer interior .....	13
Cleaning of the print head .....	15
Maintenance of the cleaning rollers .....	16
■ <b>Help &amp; Support</b> .....	17

# Printer description

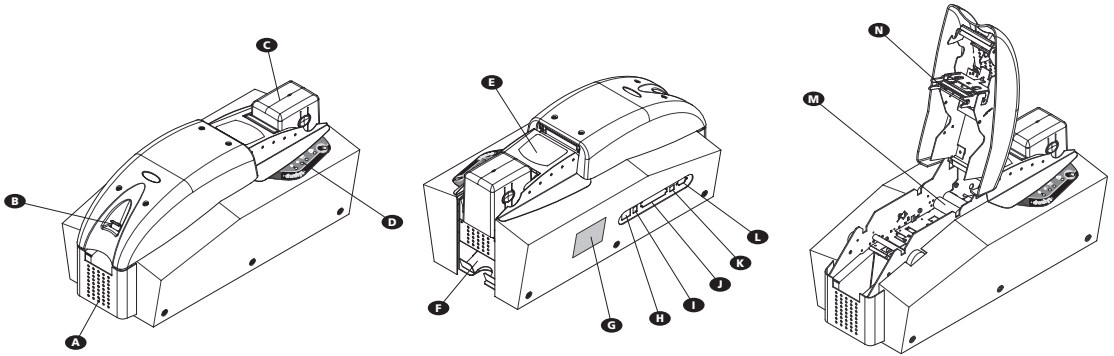

- A** Card Output Hopper
- B** Cover Lever
- C** Card Feeder
- D** Control Panel
- E** Flip Over Module
- F** Reject Card Box
- G** Identification Label
- H** Switch
- I** Electrical Connector
- J** Parallel Port (standard)
- K** USB Port (standard)
- L** Serial Port (optional)
- M** Cleaning Rollers
- N** Thermal Transfer Print Head


- Collects the cards ejected from printer
- Allows the printer cover to be opened and closed
- Holds the cards before printing
- Shows the printer activity
- Rotates the card 180°
- Collects the faulty cards
- Gives the printer model and serial number
- On/Off switch
- For connecting the printer to the power supply
- Enables data to be received and sent from and to the computer
- Enables data to be received and sent from and to the computer
- Enables data to be received and sent from and to the computer or connection to an external smart card reader/encoder
- For printing cards



## IMPORTANT !

The printer must be placed on a flat surface, in a dust free environment. It is essential to be able to access the printer from all sides for its installation.

# Printer connection

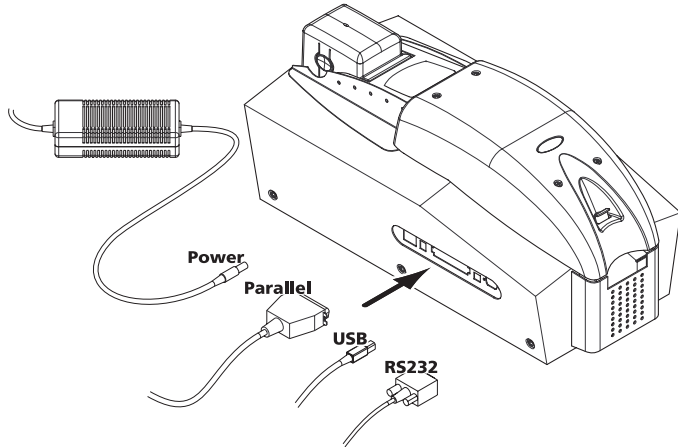

## **IMPORTANT !**

To disconnect the printer, pull the plug out of the socket which must remain easily accessible. The printer must be connected to an electrical wiring properly installed and equipped with an earth socket. Use only the printer power supply provided by Evolis.

## **IMPORTANT !**

La mise hors tension de ce produit se fait par le retrait de la fiche secteur qui doit rester accessible. Ce produit doit être raccordé à une installation électrique correctement protégée et équipée d'une terre. Utiliser uniquement l'alimentation de l'imprimante fournie par Evolis.

## **IMPORTANTE !**

Para desconectar este aparato quite el enchufe del conector, éste debe permanecer fácilmente accesible. Este aparato debe estar conectado a una instalación eléctrica correctamente protegida y con toma de tierra. Utilizar únicamente la alimentación de la impresora suministrado por Evolis.

## **WICHTIG !**

Um den Drucker vom Netz zu trennen, soll einfach der Netzstecker aus der Steckdose gezogen werden. Der Drucker selbst soll ausschließlich an einer geeigneten Stromquelle mit korrekter Erdung angeschlossen werden. Nur die mit dem Evolis Drucker belieferten Stromversorgung und Stromkabel benutzen.

# Driver installation

**Before using the Dualys printer, you must install its driver.  
The Dualys operates under Windows 2000, NT 4.0 or Xp.**

The enclosed CD-Rom includes a utility which automates the installation of the printer driver. This utility installs the suitable driver for your computer configuration. To install the Dualys Windows Drivers, please proceed as described below:



*Insert the CD-Rom in your computer CD drive.  
The program runs automatically.*



*Click on the menu "**Driver Installation**".  
The driver installation runs automatically.*




**NOTE !**

For further information or if the installation program does not run automatically, refer to the User's Guide supplied on the CD-Rom.

# Indicators

There is a Control Panel on the upper part of the printer with four LED's. Each is associated to a symbol showing the Dualys activity during printing.

The lights show:

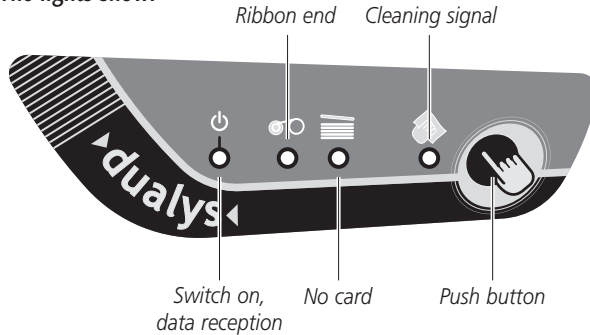

The control panel LED's are in either of the following conditions:

- SWITCHED ON
- SWITCHED OFF
- ☀ FLASHING

The push button allows re-initialization in case of:



- NO CARD or INTERNAL PRINTER PROBLEM
- MAGNETIC ENCODING ERROR
- CARD EJECTION

**It also allows:**

- Printing of a test card
- Running of a cleaning cycle

# Indicators

Refer to the following conditions to determine the status or current activity of your printer.



PRINTER READY

- The printer is ready to process



PROCESSING

- The printer is receiving data.



END OF RIBBON

- There is no ribbon inside the printer.
- The ribbon is finished.
- The ribbon has been incorrectly installed.
- The ribbon has cut.

Printing will start again after the ribbon has been checked out.



NO CARD

- There is no card in the feeder.
- The card thickness is not properly set.
- The cards are bulging.
- The cards are stuck together.

Press the push button for one second. Printing will start again after the feeder has been checked out.

# Indicators



PRINTER CLEANING ALERT

- **A cleaning cycle is required.**  
See Cleaning section for more information.



MECHANICAL PROBLEM

- **A card is jammed inside the printer.**
- **A mechanical part is defective inside the printer.**  
Press one second on the push button. If the problem still occur, call for technical assistance.



MAGNETIC ENCODING ERROR  
OR PRINTER COVER OPEN

- **The magnetic stripe card orientation in the feeder is incorrect.**
- **The type of encoding is incorrectly set (HICO or LOCO).**
- **The encoding data does not comply with ISO 7811 Norms.**  
Press one second on the push button. The current magnetic encoding job will start again. If the problem still occur, call for technical assistance.
- **The printer cover is open.**




COOL DOWN MODE

- **The print head system is cooling down.**  
*Note: the printer stops. The pending printing job starts again automatically after a few seconds.*


# Cards loading

## Card feeder

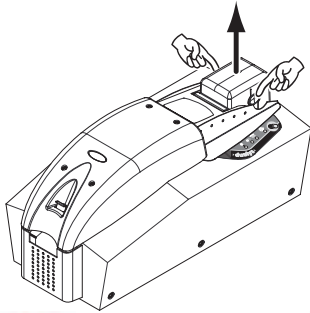


1

Remove the feeder from the printer as shown.

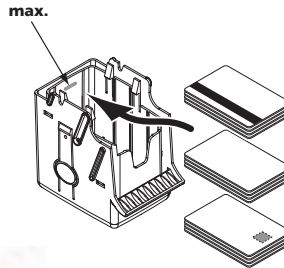

2


Press the spring system down inside the feeder and insert the cards as shown (100 cards max. 0.76mm-30mil).  
Note: The side to be printed must be facing down.

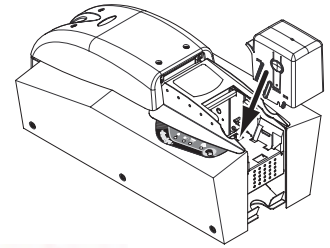

3

Replace the feeder in the printer.

## Card thickness adjustment

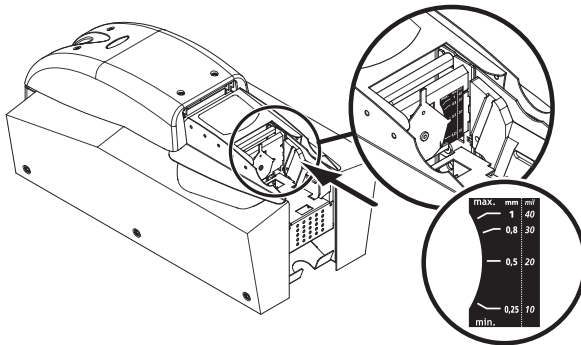


Move up or down the handle as shown to adjust the card thickness.

Note: factory setting for card thickness is 0.76mm (30mil).


# Cards loading

## Card output hopper

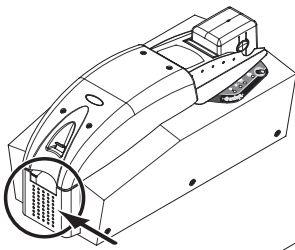


1

Locate the door of the output hopper.

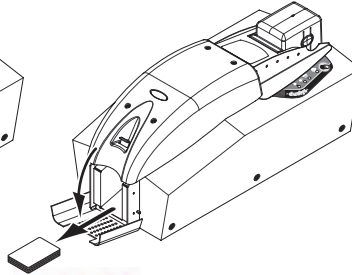

2


Open the door as shown and remove the printed cards.

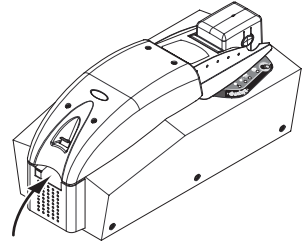

3

Close the door.

## Reject card box

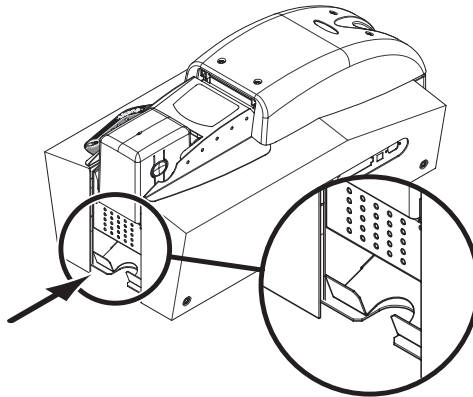

Locate the reject card box and remove the faulty or used cleaning cards.

# Cards loading



## **IMPORTANT !**


### **Advice about selecting cards**

- Only use the types of card which comply with the Dualys printer specifications.
- Do not touch the surface of the cards ; the printing quality depends upon this.
- Do not use damaged, folded or embossed cards.
- Always store blank cards in a clean, dust free location.
- Only use the magnetic stripe cards that comply with ISO Standard 7810 and 7811.
- In order to function correctly, the magnetic stripe must be moulded to the card. Never use a card with a glued magnetic stripe.
- Only use smart cards that comply with ISO Standard 7816-2.
- Do not print on the chip of the card.

### **Card thickness**


- The Dualys printer accepts cards from 0.25mm (10mil) to 1mm (40mil) thickness.

# Ribbon loading

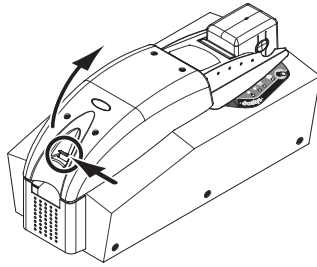

1

Open the printer cover by pressing on the lever, then pivoting it.

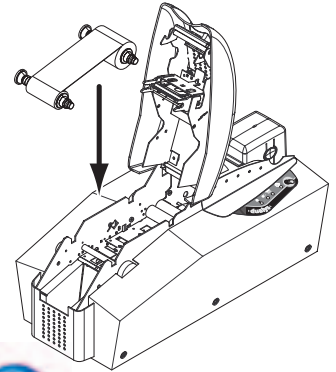


2

Install the ribbon in the printer as shown.

3

Close the printer cover.

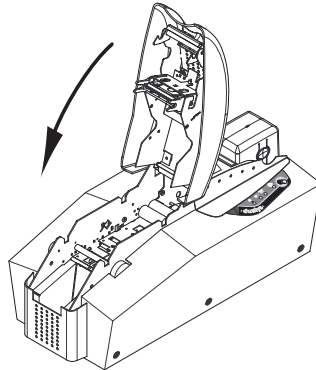

## **IMPORTANT !**

The type of the ribbon is selectable through the printer driver in the "Main" tab. The ribbon must be correctly installed for the printer to function. Only use Evolis ribbons. Evolis accepts no responsibility if the printer is damaged following the use of an unapproved ribbon.


The ribbon is automatically positioned each time the cover is closed.

# Cleaning

## Cleaning of the printer interior


Use the Pre-Saturated Cards (UltraClean Cleaning Kit Part Number: A5011).  
Cleaning cycle: every 1000 cards.

The Dualys printer is fitted with a cleaning alert, which is activated every 1000 inserted cards. The cleaning alert LED's switches on. If you do not clean the printer while this LED is switched on, it will start flashing after another 200 cards has been inserted.

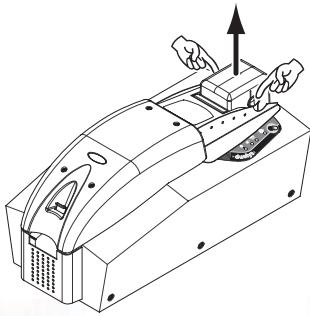


1

Remove the feeder from the printer as shown.

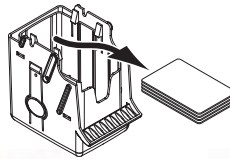


2

Remove the cards present in the feeder.

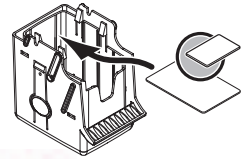


3

Take a new pre-saturated cleaning card and insert it in the feeder as shown.

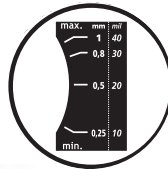

4


Check that the card thickness is set to 0.76mm (30mil).

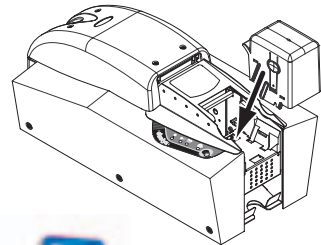

5


Replace the feeder in the printer.

# Cleaning

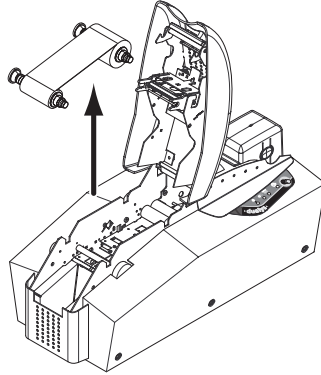


6

Remove the ribbon from the printer.

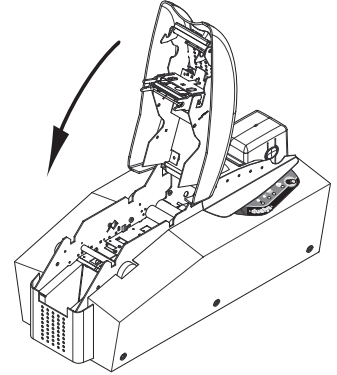

7

Close the printer cover.

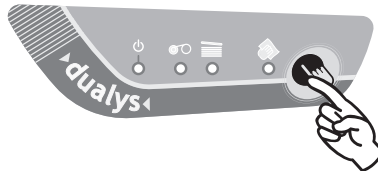

8

Press the control panel push button for a few seconds. The cleaning starts.



After performing a cleaning cycle, wait 2 minutes for the cleaning fluid to evaporate completely before using the printer again.



## IMPORTANT !


Protect the validity of the print head warranty!

If the cleaning cycle is not performed before the 1200th card is printed, the print head warranty is void.

# Cleaning

## Cleaning of the print head

Use the swabs (UltraClean Cleaning Kit Part Number: A5011).  
Cleaning cycle: before inserting every new ribbon.

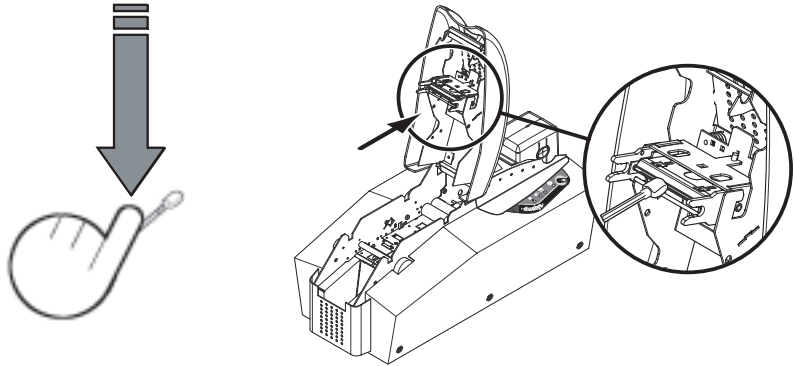

1

Take a new swab and press on the stick to let the liquid out.

2

Open the printer cover and locate the print head.

3

Switch the printer off. Then, gently rub the swab along the print head for a few seconds.



After performing a cleaning cycle, wait 2 minutes for the cleaning fluid to evaporate completely before using the printer again.



### **IMPORTANT !**


The print head is a fragile component.  
To avoid damaging it:

- Never put the print head in contact with pointed and/or metal objects.
- Avoid touching the print head surface with the fingers.
- Always unplug the printer from the power supply before cleaning the print head.

# Cleaning

## Maintenance of the cleaning rollers

Use the cleaning cloths (UltraClean Cleaning Kit Part Number A5011).  
Cleaning cycle: before inserting every new ribbon.

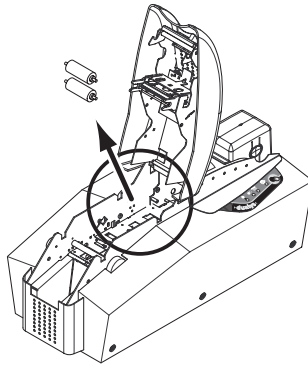


# 1

Open the printer cover. Remove the ribbon if present and remove the two cleaning rollers.



# 2

Remove dust by rubbing gently with the cloth over the whole roller surface.

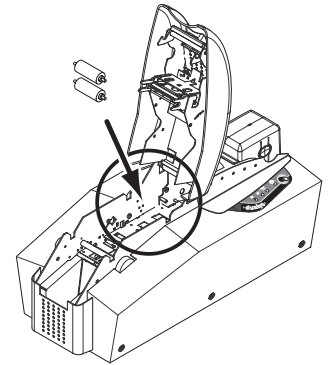

# 3

Once dry, replace the two rollers in the printer, then close the printer cover.



After performing a cleaning cycle, wait 2 minutes for the cleaning fluid to evaporate completely before using the printer again.

# Help & Support




## evolis.com

If you need some help, the Evolis Web Site will offer you some technical information in the Support & Services section.

This section provides drivers, firmware, software downloads, instruction manuals, and gives answers to frequently asked questions (F.A.Q.).

The information below will help you to solve possible problems that can occur when using your printer and help you to solve printing quality issues.

## A blank card is ejected from the printer

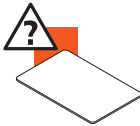

1. Check the ribbon
  - *Check that the ribbon is not finished or cut. Replace or reinstall the ribbon, if necessary.*
2. Check the printer cleanliness.
  - *Clean the print head.*
3. Check the printer interface cable
  - *Check the connection to the computer and to the printer.*
  - *Test with another cable of the same type.*
4. Elements of the print head may be damaged.
  - *Print a test card*

If the test card does not print, contact an Evolis Reseller for a replacement print head.

# Help & Support



## The print quality is not satisfactory

1. Check the printer cleanliness.
  - *Clean the print head.*
2. The contrast settings must be modified
  - *Increase the contrast settings in the printer driver configuration.*
3. The type of card used may be inappropriate
  - *Check if the type of card used has the required specifications.*
  - *The texture of the card is rough or not perfectly flat.*
  - *Print test with another type of card.*



## Partial or incorrect printing

1. Check the settings defined for the printing
  - *Check that no element of your page setup is outside the print margins*
  - *Check the orientation of the selected document in the printer driver configuration (Landscape or Portrait)*
2. Check the printer interface cable
  - *If unusual characters print, check that you are using the interface cable appropriate to your printer.*
  - *Check the connection to the computer and to the printer.*
  - *Test with another cable of the same type.*
3. Check the printer cleanliness
  - *Clean the inside of the printer, the cleaning roller and the print head if necessary.*
4. Check the cards cleanliness
  - *Check that the cards are stored in a dust-free location.*
5. Check the print head cleanliness
  - *See the procedure for cleaning the print head in the "Cleaning" section.*
6. Check the ribbon
  - *Its location in the printer*
  - *Its correct winding path*
7. Check the print head
  - *If white horizontal lines appear on the card, some print head elements may be clogged or damaged.*
  - *Clean the print head*
  - *If the problem is not solved after cleaning, contact an Evolis Reseller for a replacement print head.*

# Help & Support



## Contacting an Evolis Reseller

**If the suggestions given in the previous section do not enable the problem(s) to be solved, contact your local Evolis Reseller.**

When you call an Evolis Reseller, you must be near your computer and be ready to supply the following information:

- The type and the serial number of your printer
- The type of configuration and the operating system you are using
- A description of the incident that occurred
- A description of the steps you have taken to solve the problem

**For further information about the Dualys printer, the supplied CD-Rom contains a User's Guide as a PDF format. You can display this guide or print it.**

